
Gen1 Terminal Firmware Upgrade Guide (Ver. 1 control board)

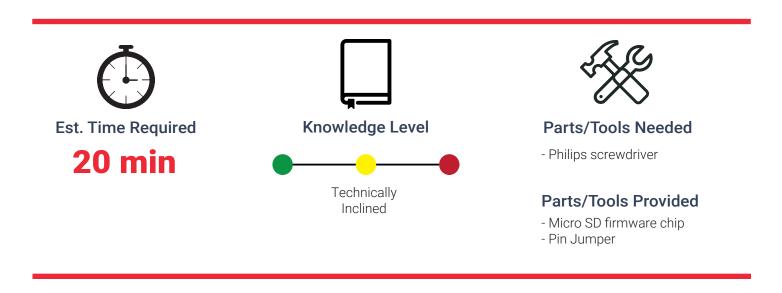


Intro


This guide provides instruction on upgrading firmware on a Parkonect Gen 1 terminal with a **V1 control board (Black PCB)**



Turn off power to terminal

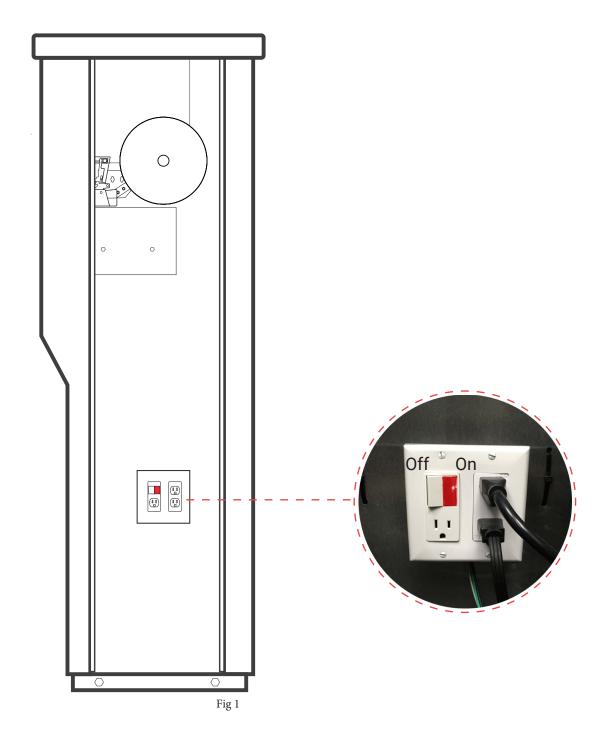

Remove screws securing relay board.

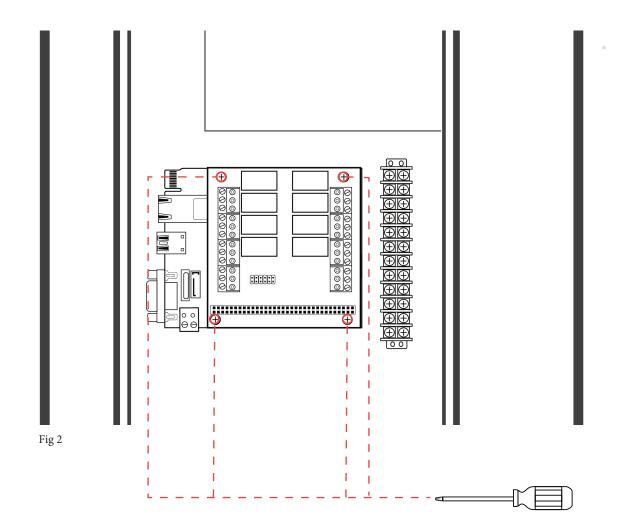

Carefully remove relay board by grasping on both sides and pulling towards you. Relay board should hang by attached wiring. This will expose jumper pins.


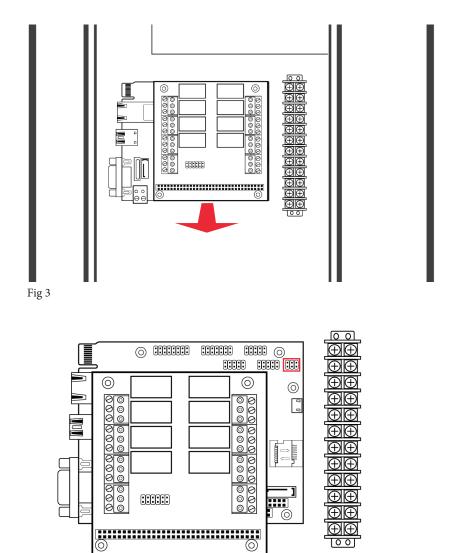


Fig 4


Place jumper on JP1 (SD boot).

NOTE: Jumpers are usually supplied on board and are attached on a single pin.

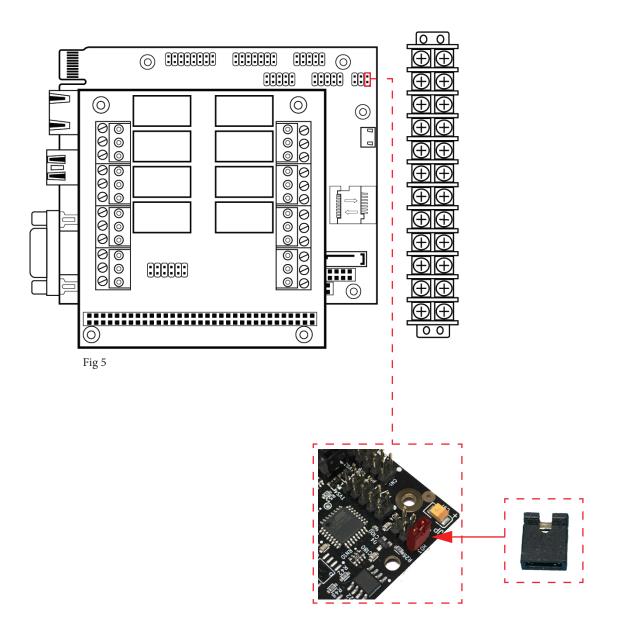


Slide and open SD card slot (1). Remove any existing micro SD card (2+3). Insert included firmware SD card (4). Close and slide to lock chip into place (5).



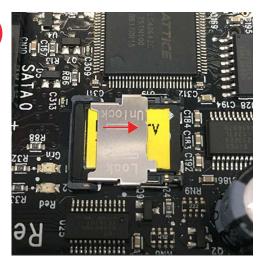



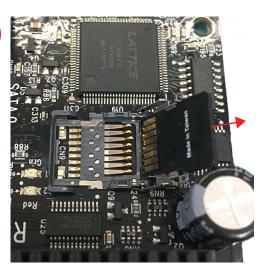


3







(5)

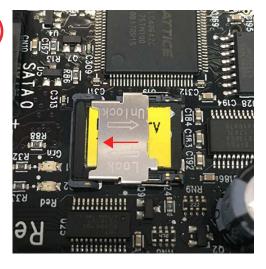



Turn on terminal.

Screen should display "Starting Up...Please wait" and then switch to "Updating System. Do not power off."

WARNING: Turning off unit during install may result in corruption of recovery chip

Updating terminal can take up to 15min. When update is complete the screen will display "Remove power and recovery SD"


Turn off terminal.

Remove pin jumper (Step 4) and upgrade SD chip (step 5).

If control board has a SD card, remove this as well by pushing card towards center of the board and releasing. The spring loaded lock will release and the SD card can be removed.

NOTE: The newest Parkonect firmware no longer requires these three items (micro SD, regular SD card, or pin jumper) to function.




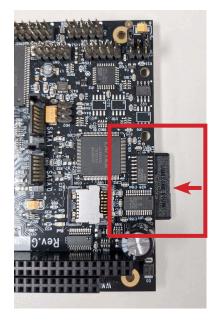







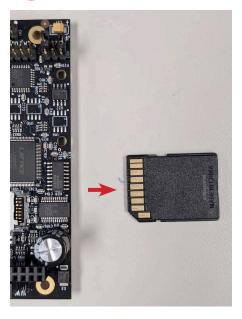

Turn on terminal. Ensure terminal boots correctly.

Contact Parkonect support to complete final testing.

Questions?

Contact our support team!



