FV Mark4 Camera Activation Quick Guide

Vision LPR · https://qa.flashparking.com/docs/fv-mark4-camera-activation-quick-guide/

Requirements


1. Admin user to access the Vision Portal and add an entity.
2. Have received previous training. Provide the client with the Calendly Link to self-schedule and use the Software Implementation (SI) Request Form to notify the SI Team that a training request will be made and the topics to cover.


Implementation

Step 1: Ensure that your camera is plugged into the correct managed PoE switch and is online. If at any time you run into an issue, make sure you follow the proper escalation path to get a quick response.


1. Reach out to your branch SME.
2. Ask the corresponding Region FT Slack channel for assistance.
3. Send an email to hardwaresupport@flashparking.com.
4. For issues that need immediate attention, use the Hardware Support Slack channel.


Step 2: Go to the vision portal and navigate to the ‘Flash’ -> ‘Entities’ tab in the left-hand menu. This should bring you to the Organization page. Verify that your organization has been created. If it has not, click on ‘Add Organization’ to add your new organization.

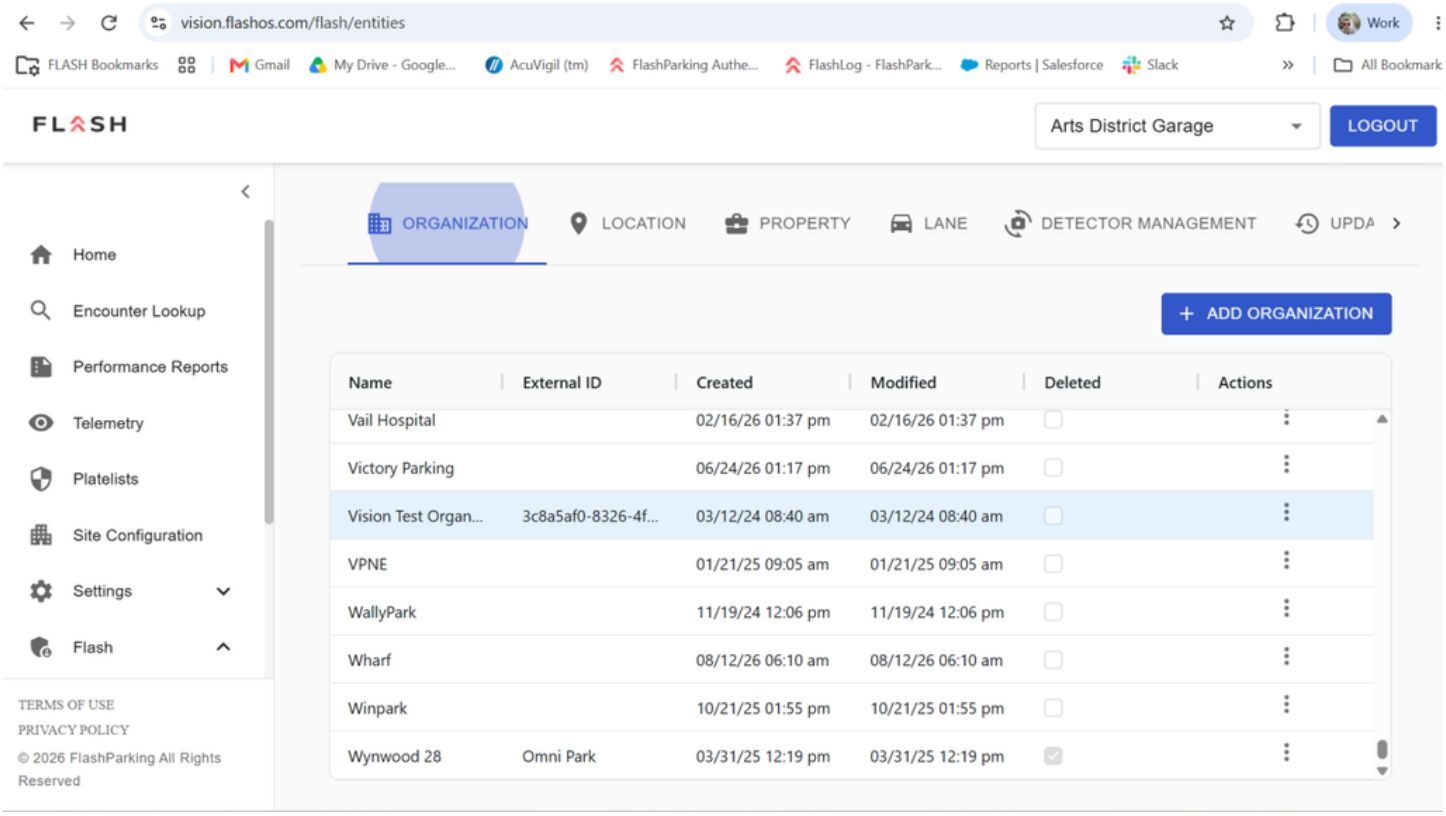

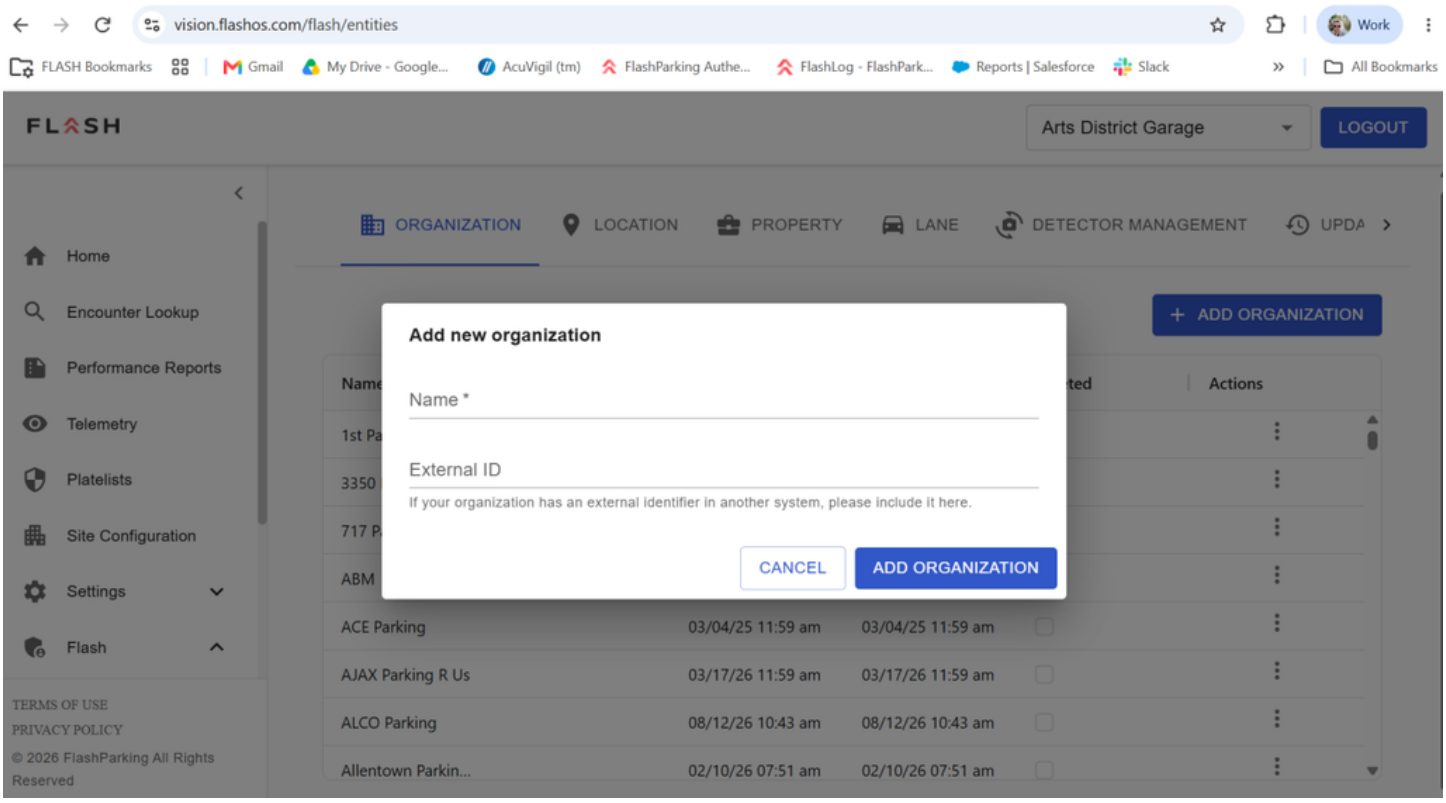


Click over to the ‘Property’ tab and verify that your property has been created. If it has not, click on ‘Add Property’ to add your new property.

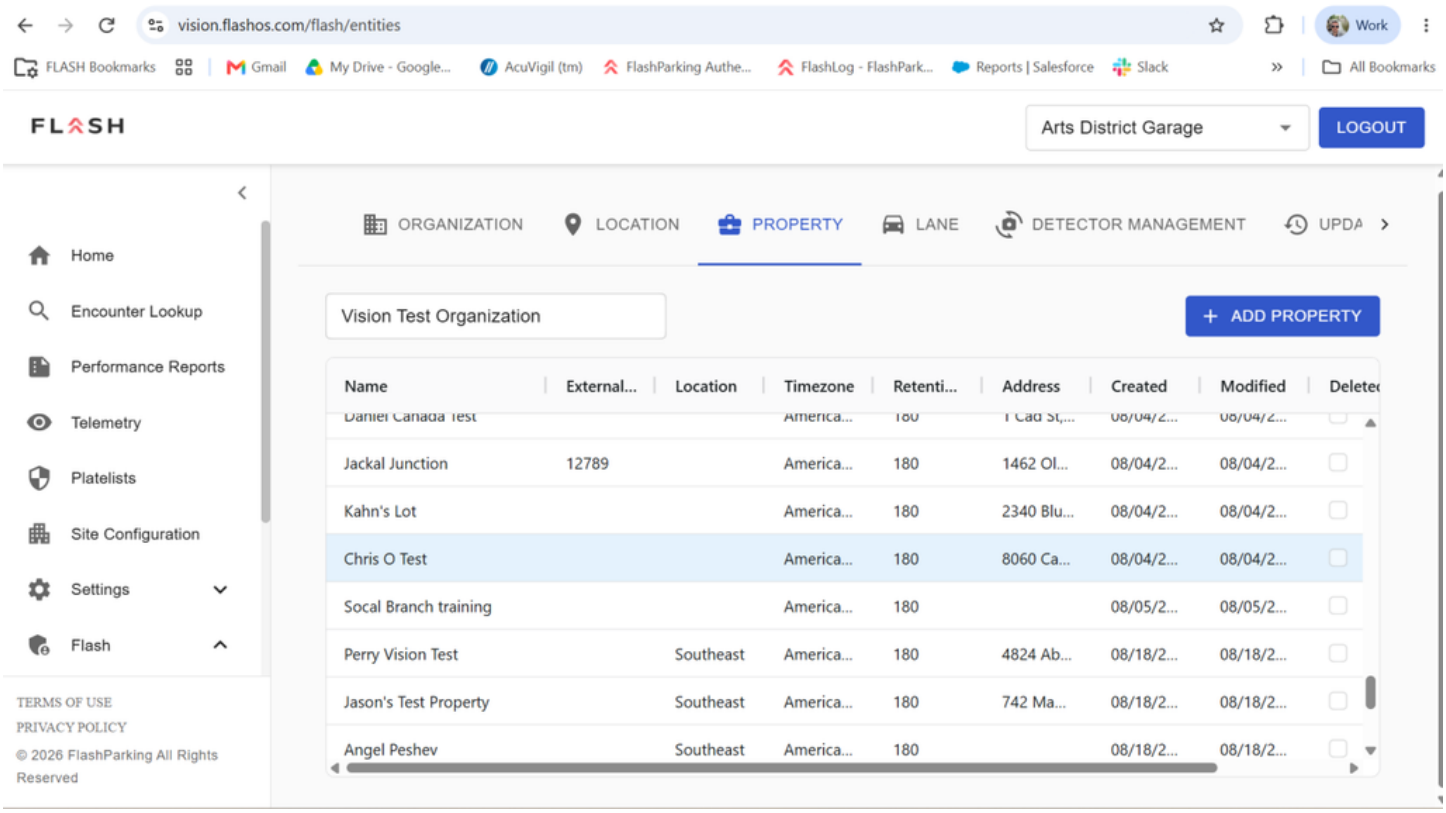

vision.flashos.com/flash/entities
FLASH
Arts District Garage
LOGOUT
ORGANIZATION
LOCATION
PROPERTY
LANE
DETECTOR MANAGEMENT
Home
Encounter Lookup
Performance Reports
Telemetry
Platelists
Site Configuration
Settings
Flash
Vision Test Organization
ADD PROPERTY
Name
External...
Location
Timezone
Retenti...
Address
Created
Modified
Jackal Junction
Kahn's Lot
Chris O Test
Socal Branch training
Perry Vision Test
Jason's Test Property
Angel Peshev
TERMS OF USE
PRIVACY POLICY
© 2026 FlashParking All Rights Reserved

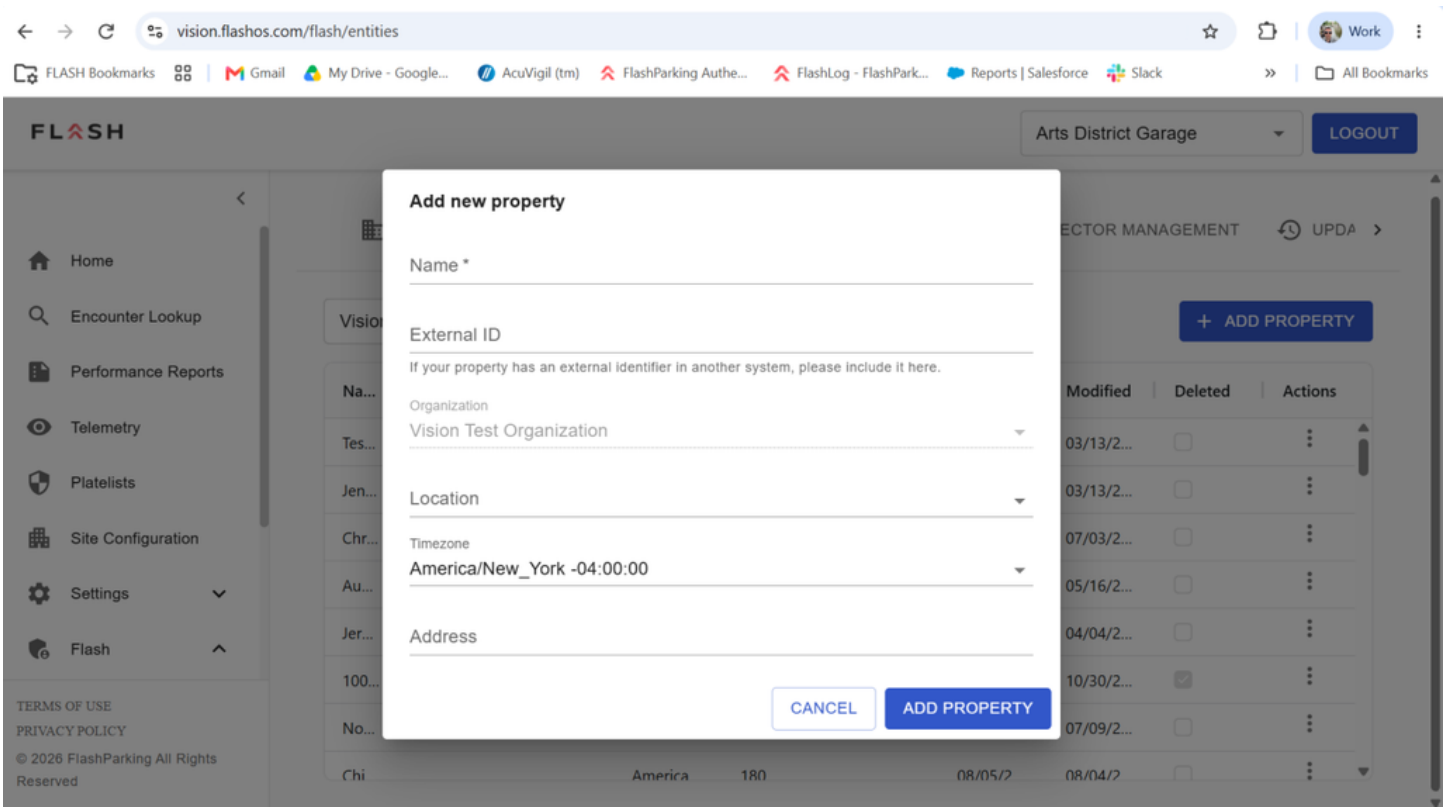
vision.flashos.com/flash/entities
FLASH
Arts District Garage
LOGOUT
Add new property
Name *
External ID
If your property has an external identifier in another system, please include it here.
Organization
Vision Test Organization
Location
Timezone
America/New_York -04:00:00
Address
CANCEL
ADD PROPERTY
Home
Encounter Lookup
Performance Reports
Telemetry
Platelists
Site Configuration
Settings
Flash
TERMS OF USE
PRIVACY POLICY
© 2026 FlashParking All Rights Reserved


Step 3: Go to the ‘Lanes’ tab. Make sure you're pointed to the correct garage in the drop-down menu at the top right-hand corner of the screen.

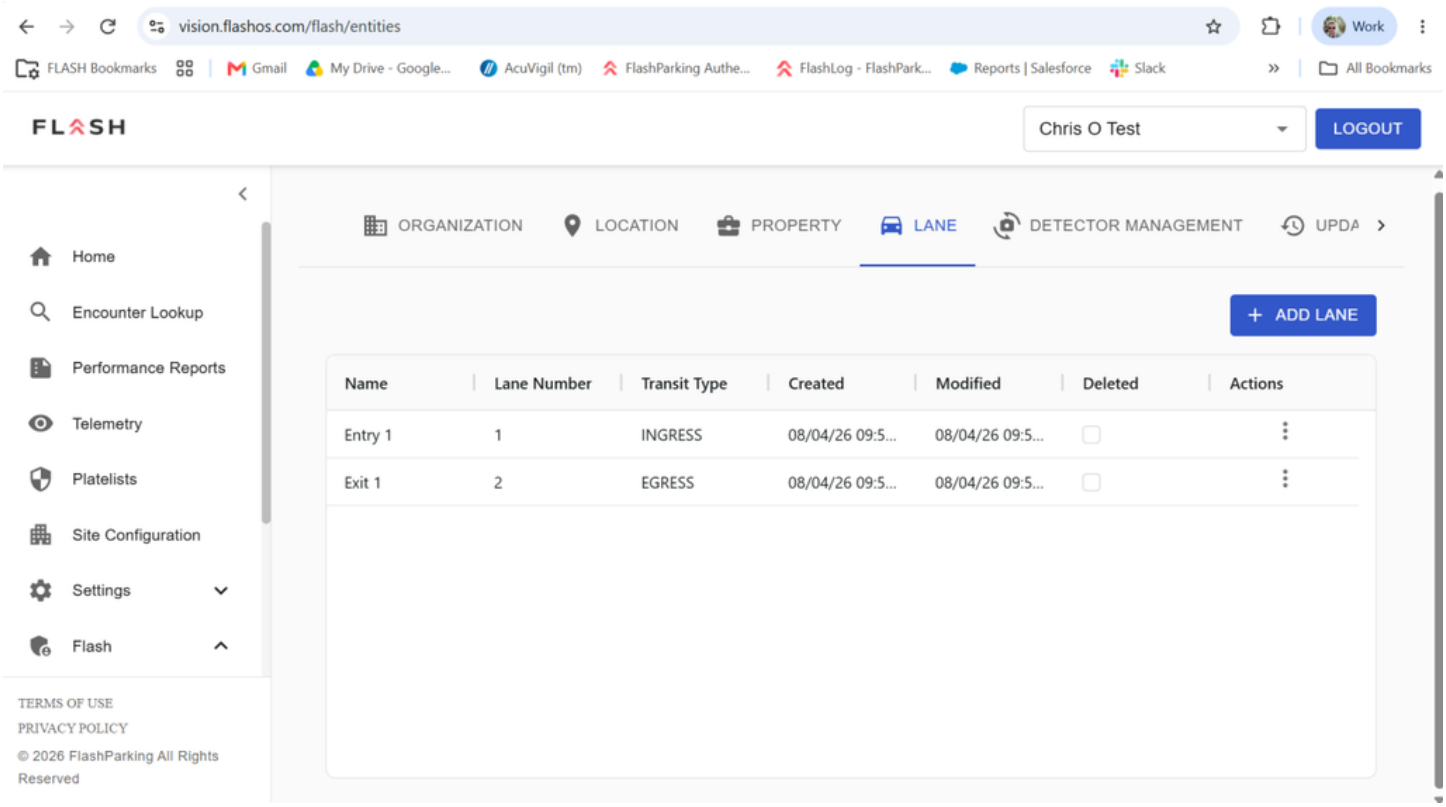


Click on ‘Add Lanes’ to add a new lane.

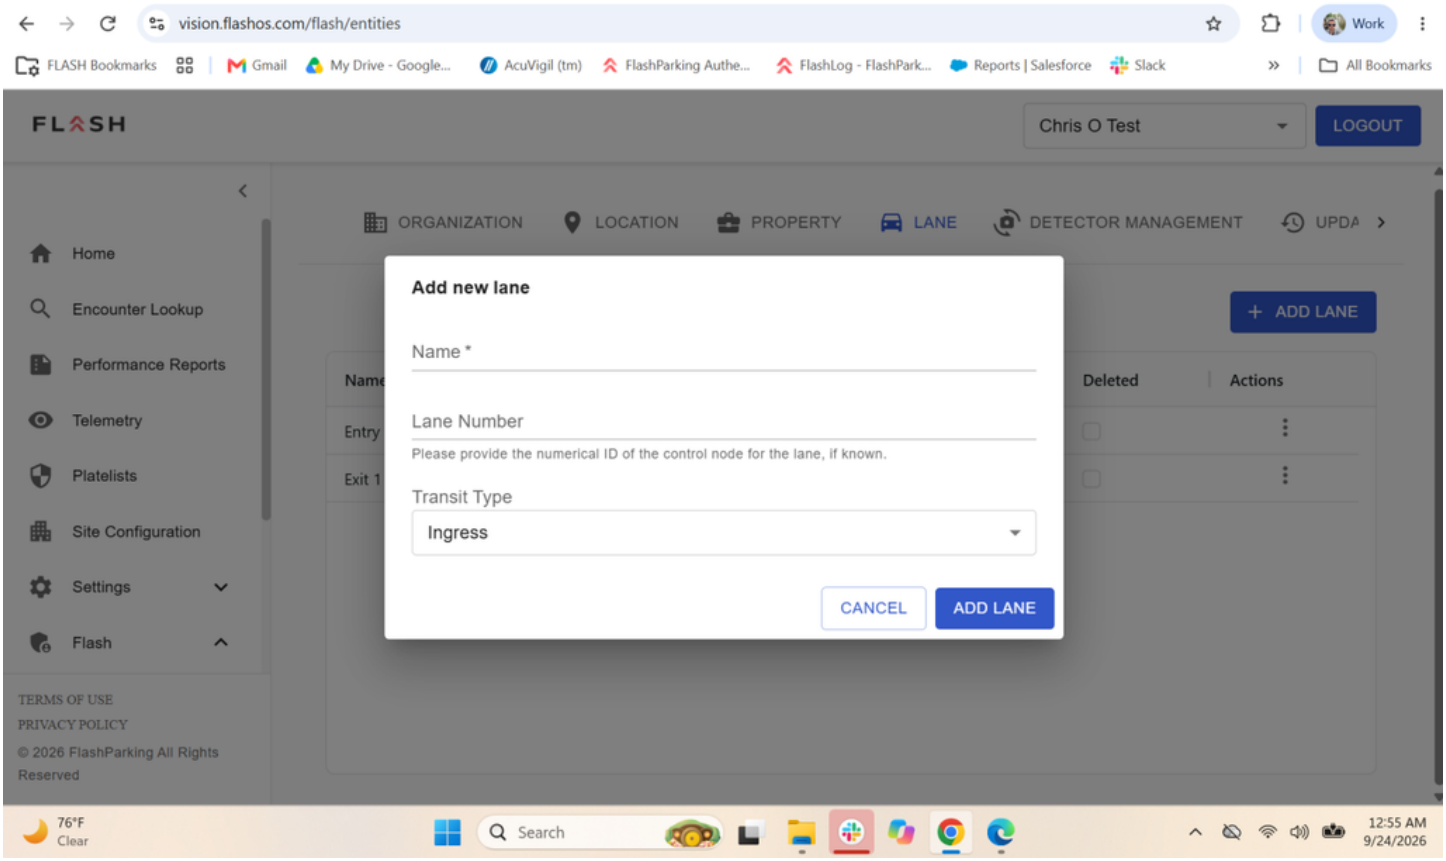


Step 4: Go to the vision portal and navigate to the ‘Flash’ -> ‘Activate Detectors’ tab in the left-hand menu.

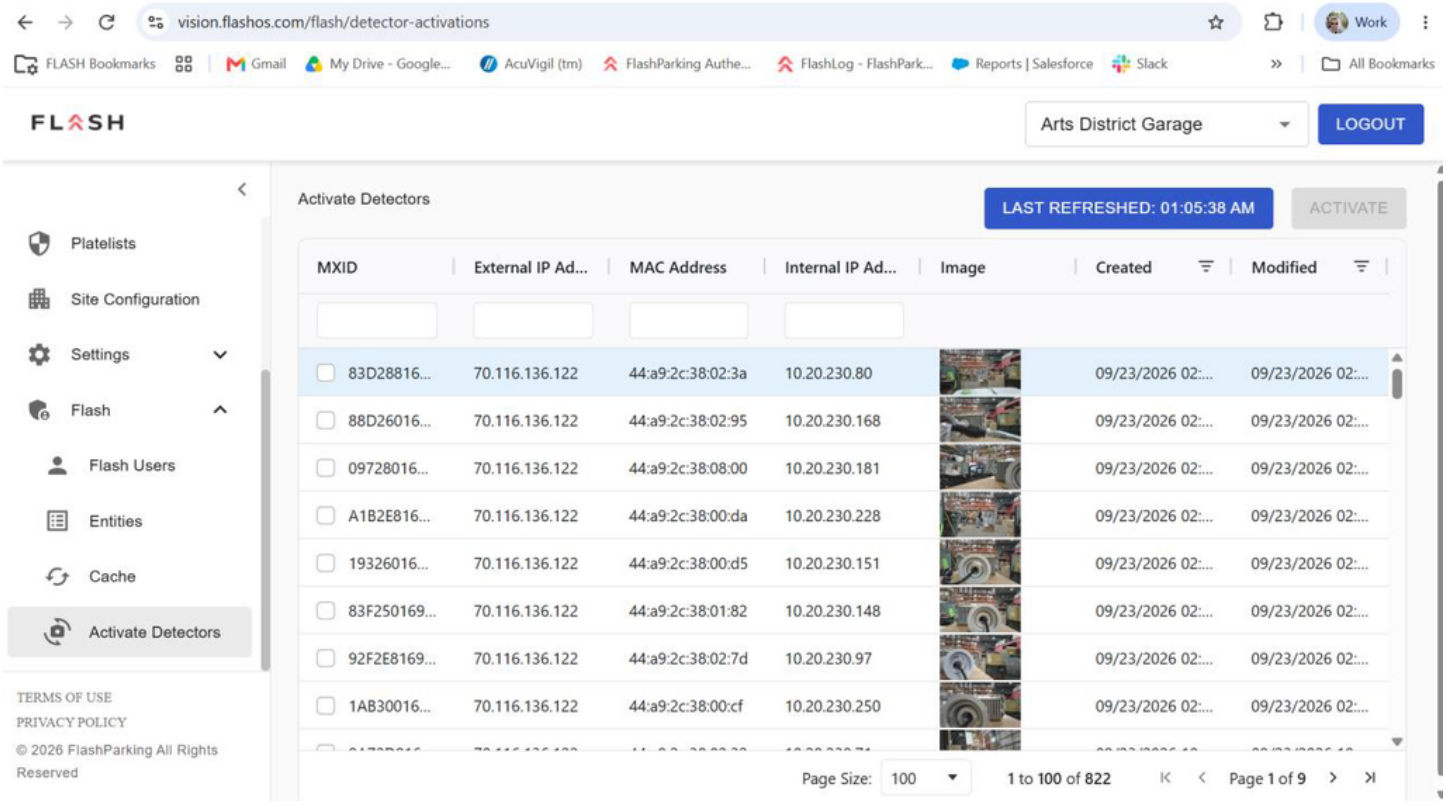


Locate your camera by MAC or IP address, select it by clicking the checkbox, then click the ‘Activate’ button in the upper-right corner.

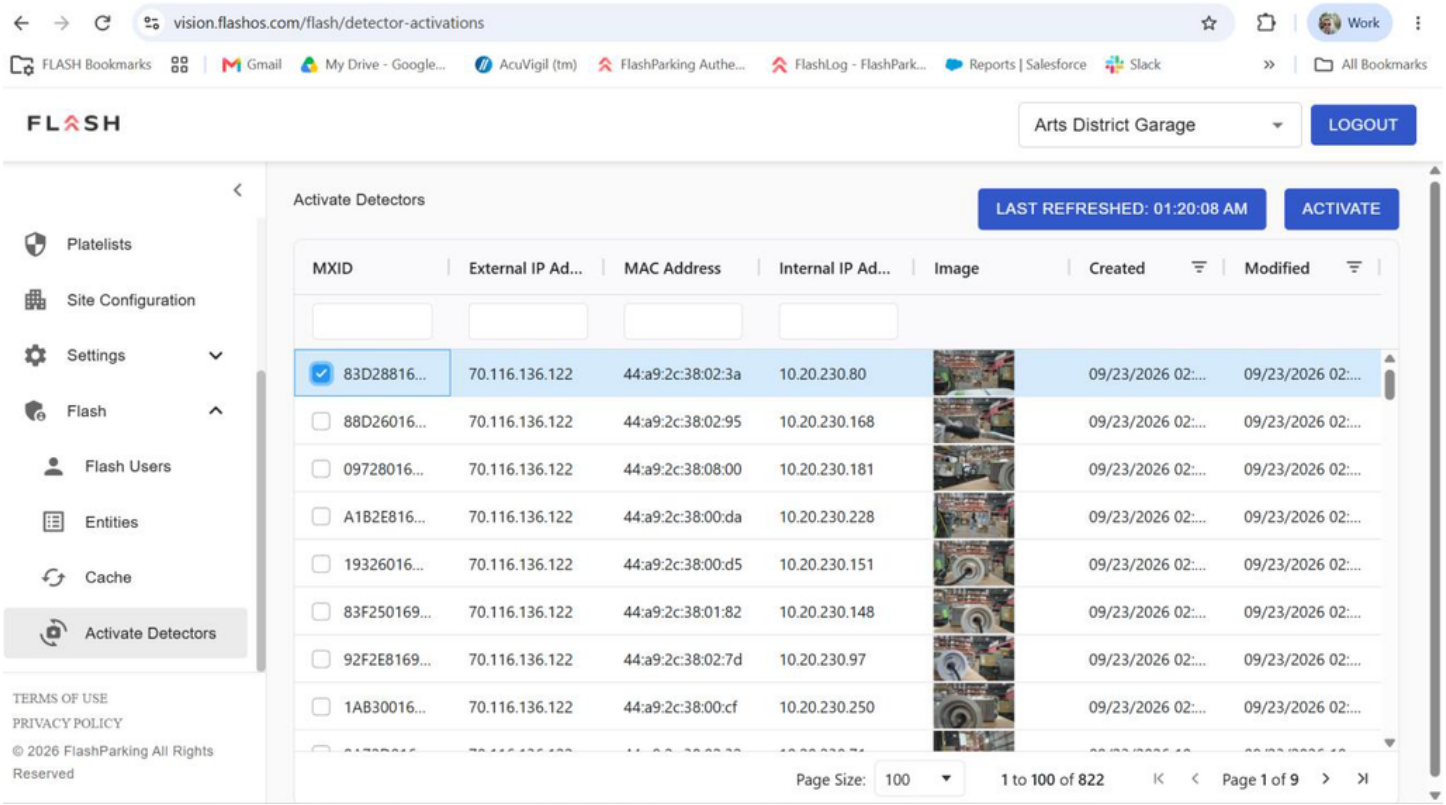


Fill out the detector's details.

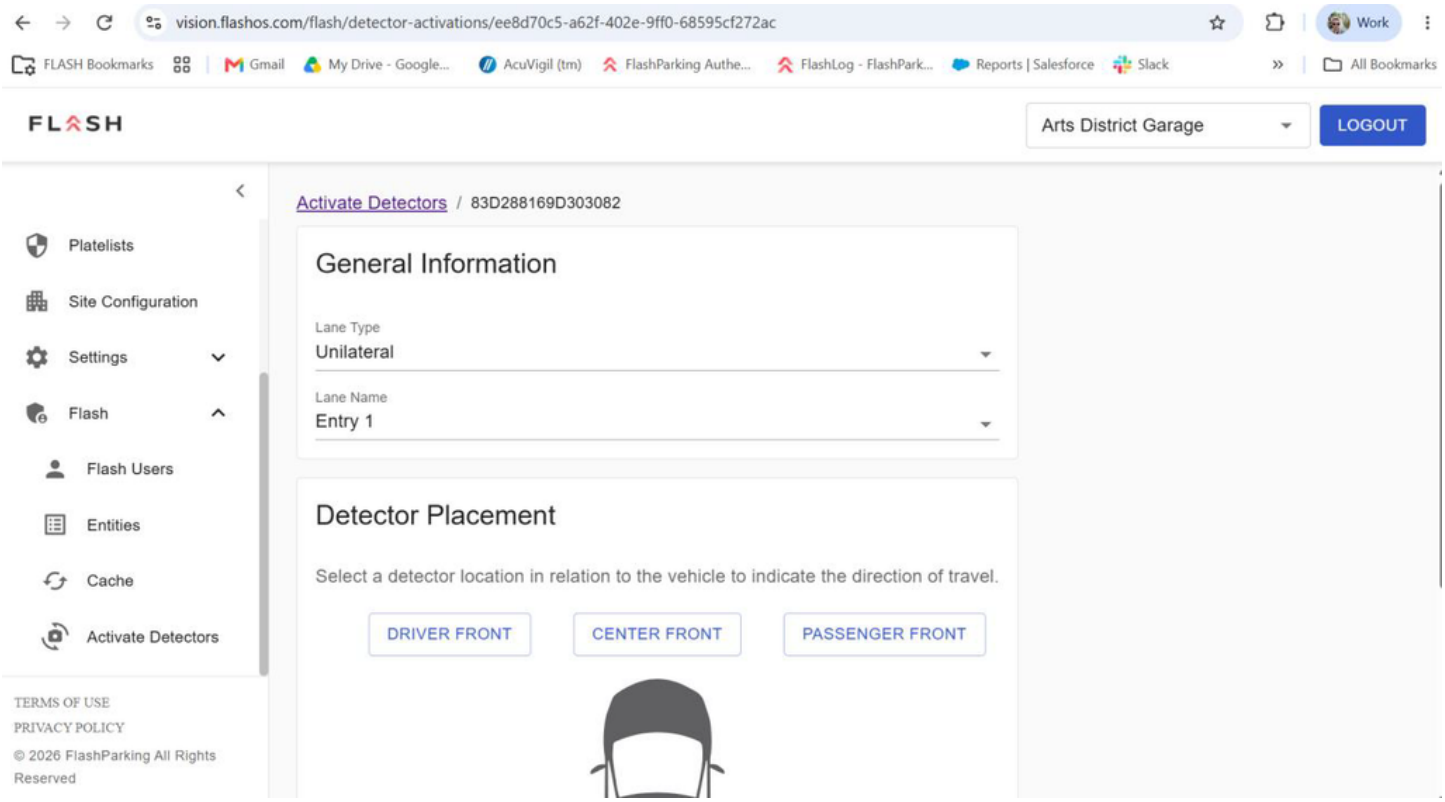


Then set the detector location and click ‘Activate’

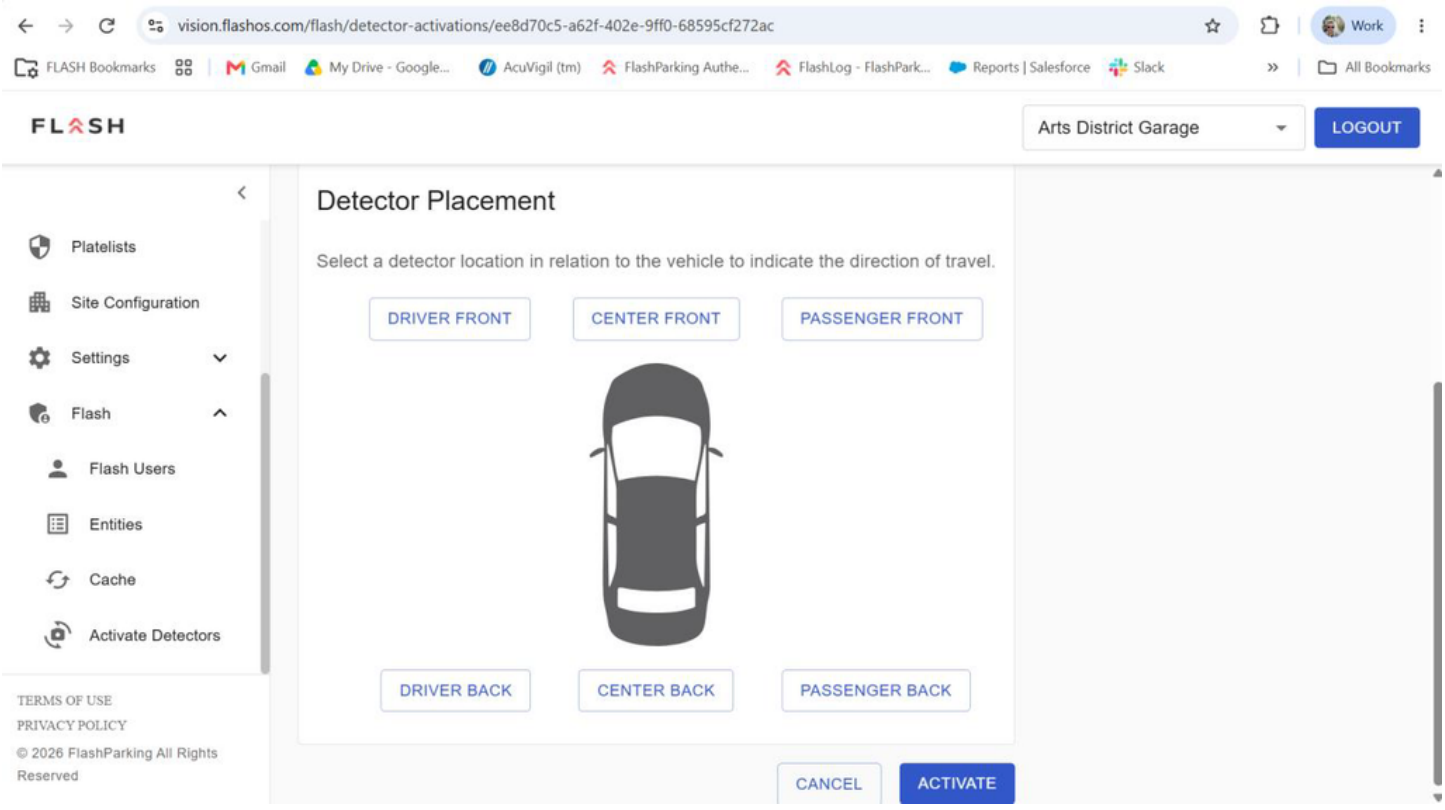


Step 5: Navigate back to the ‘Site Configuration’ tab in the left-hand menu.

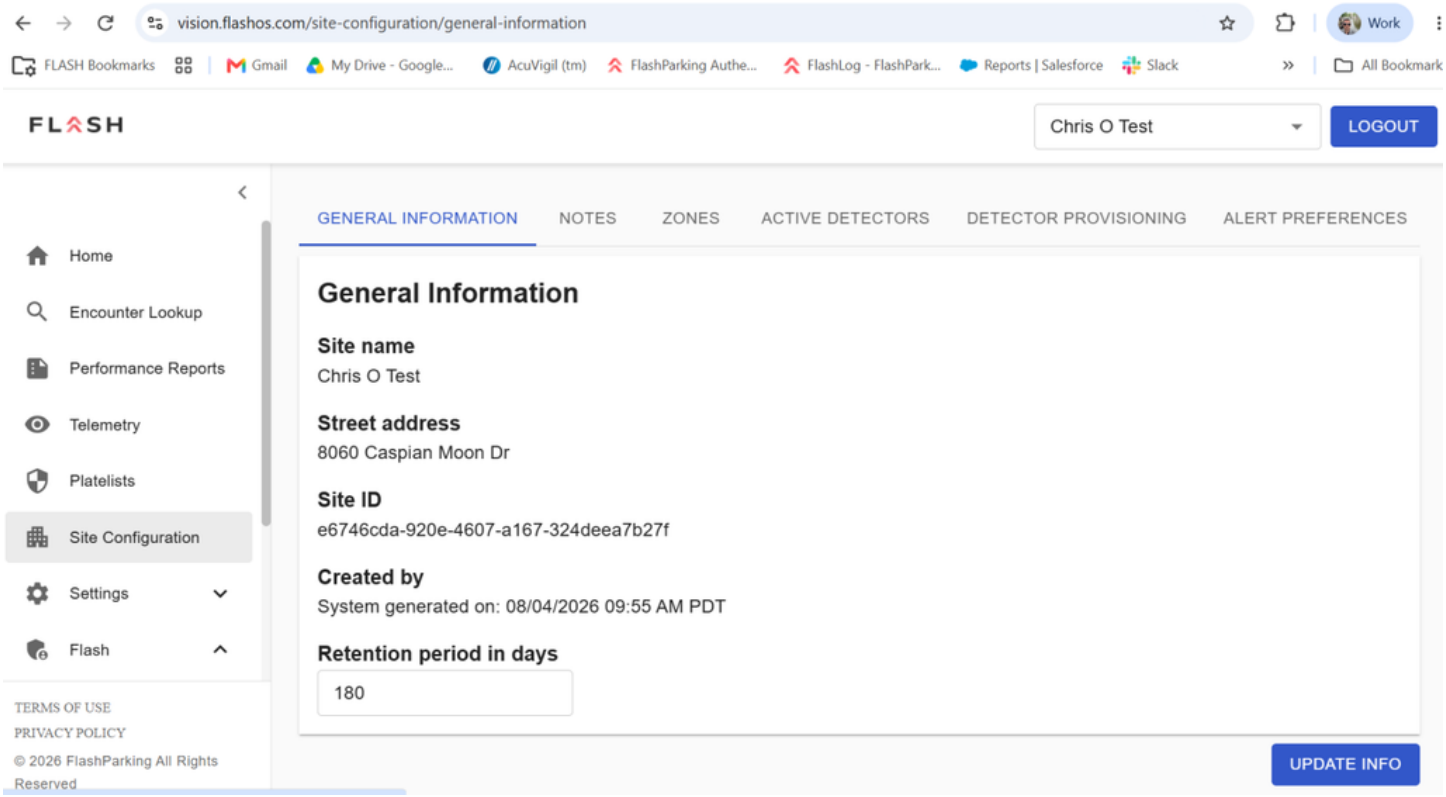



Click on ‘Active Detectors’ and use the 3-button menu to select ‘View Details’

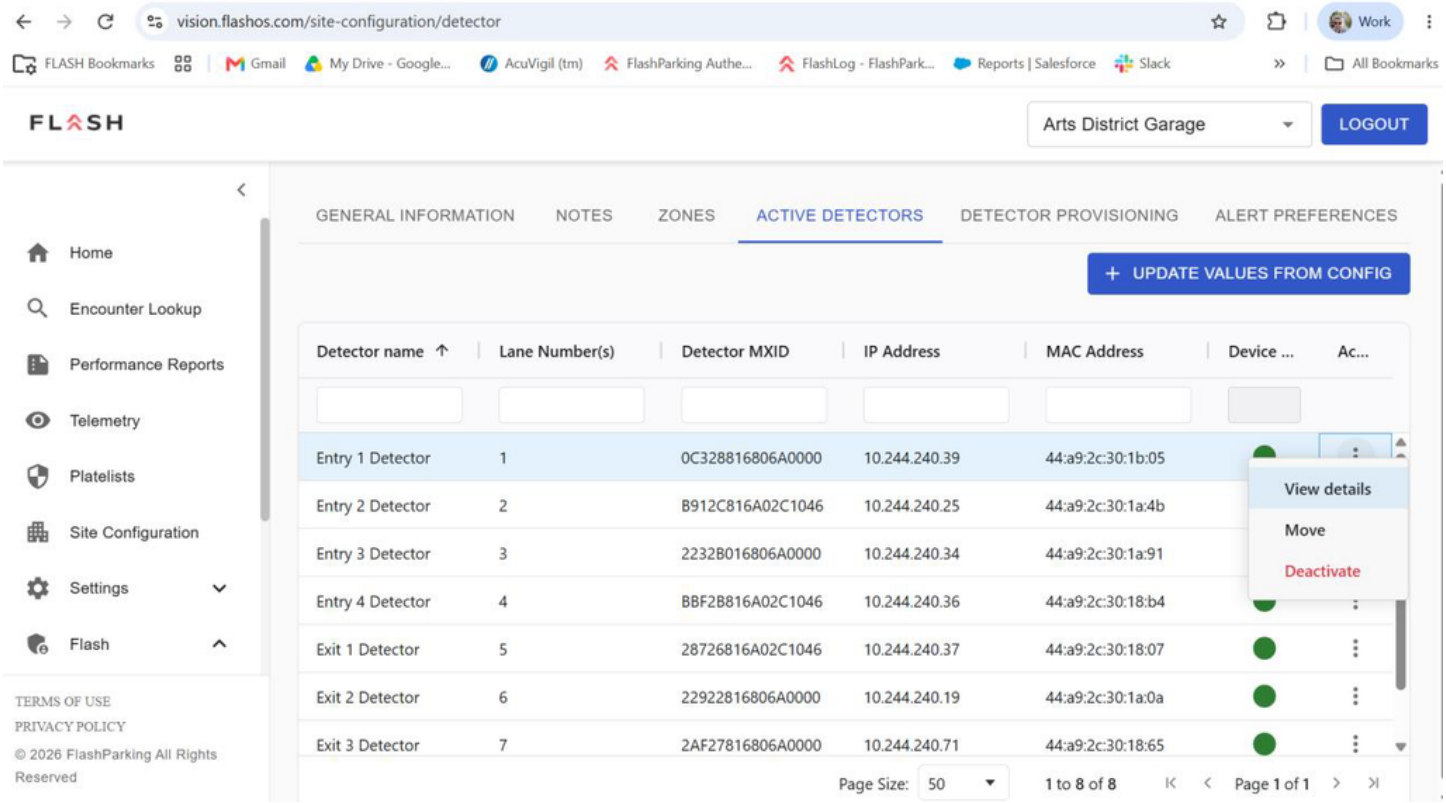


Click the ‘’ button and ‘Refresh’ to see the current ROI for your selected detector.

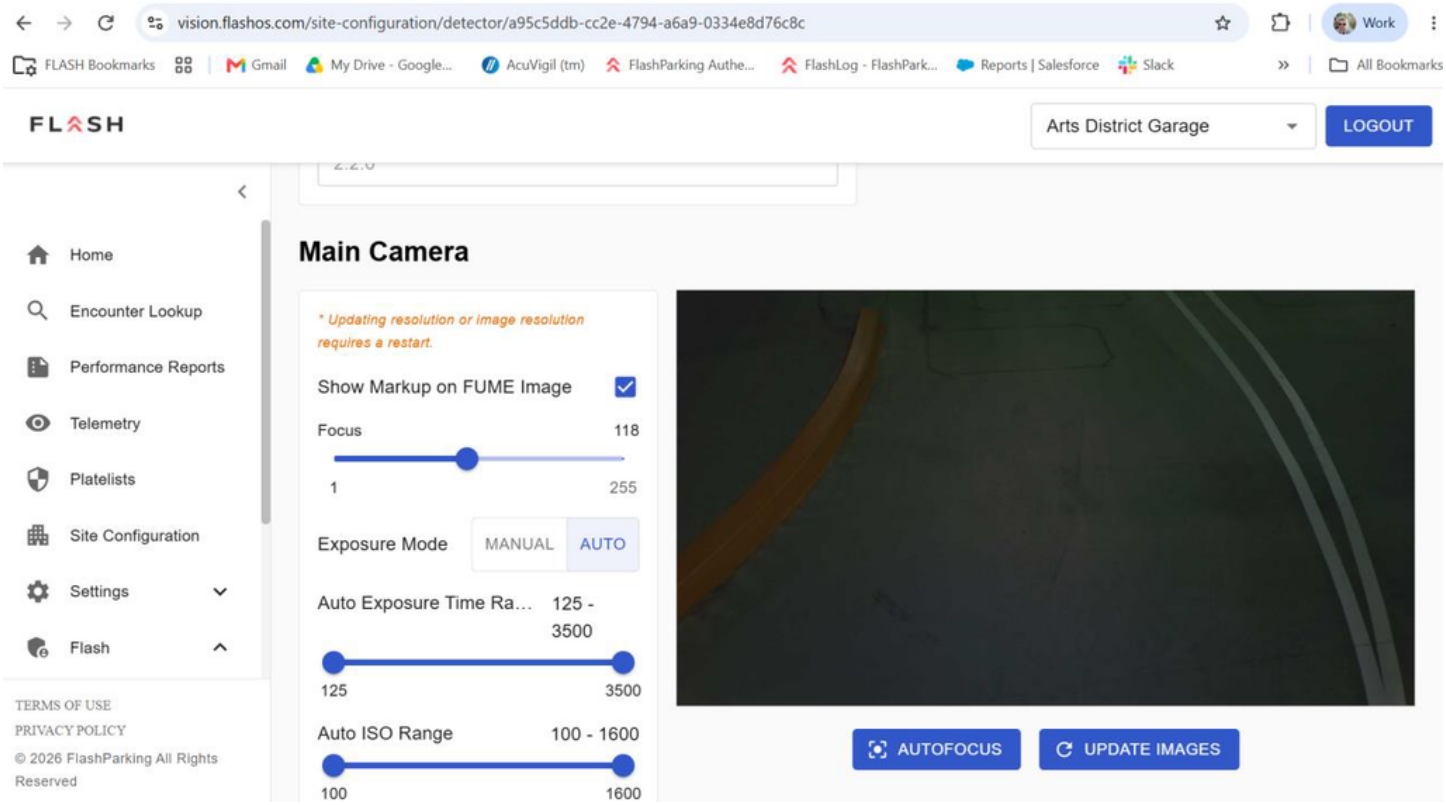


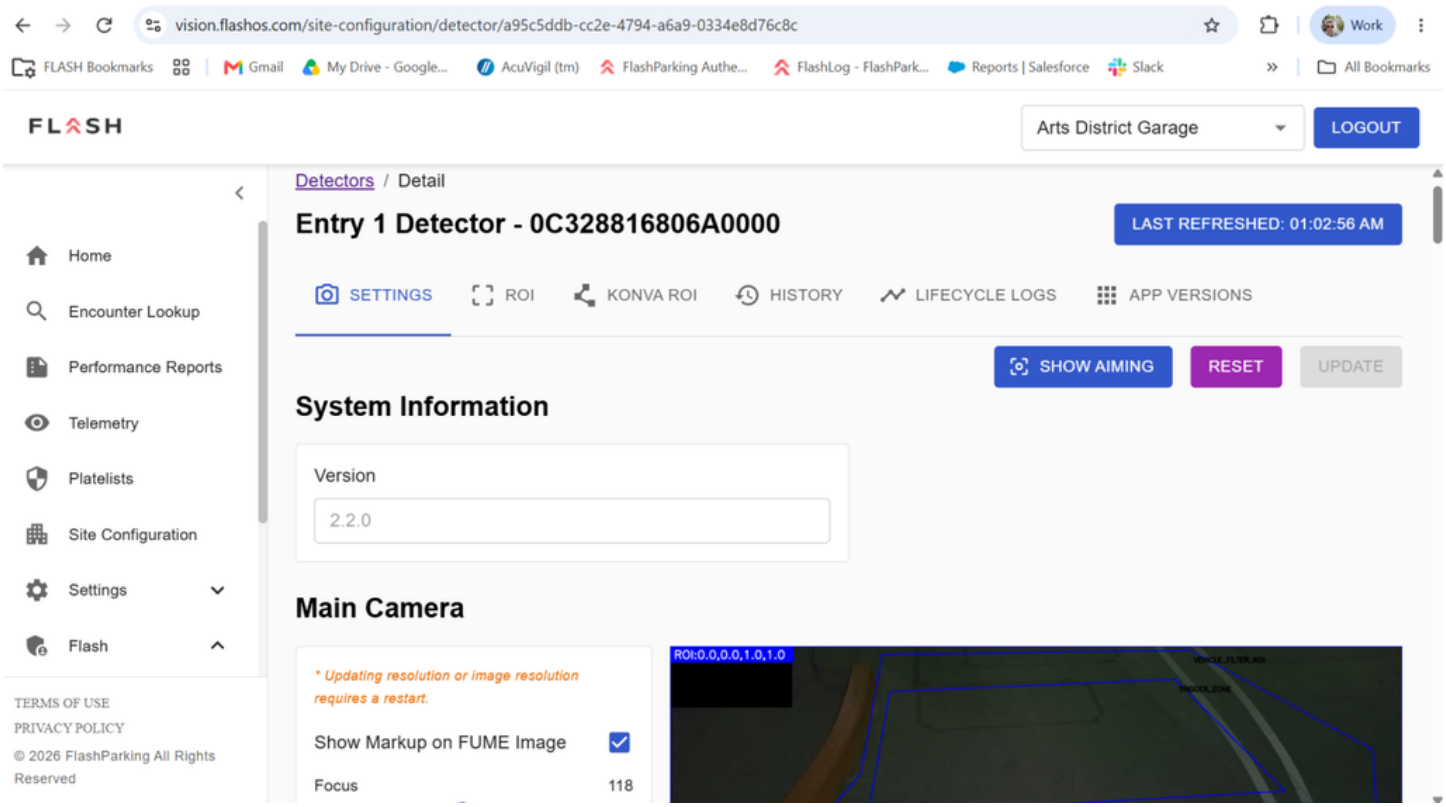

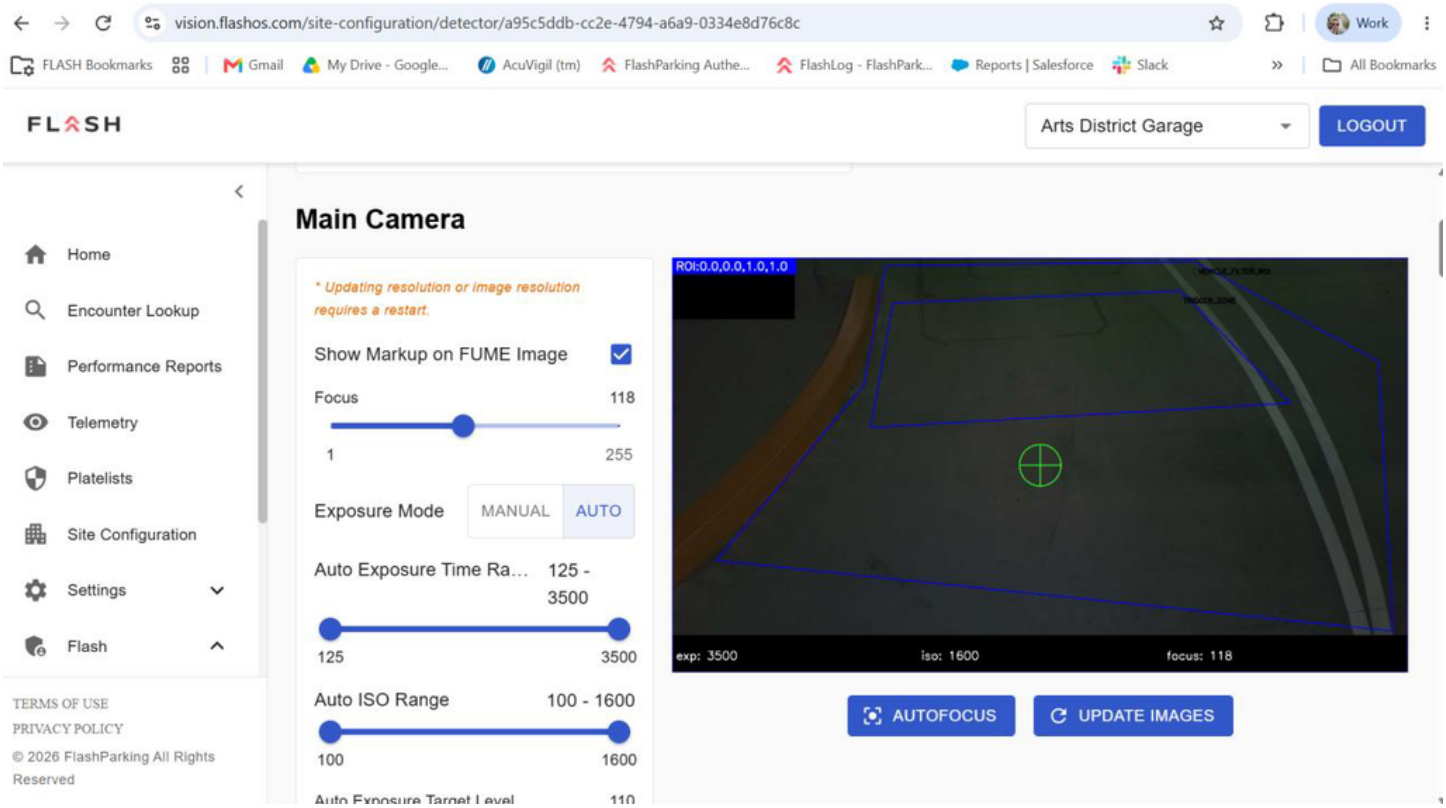

Click on Konva ROI to draw a new region of interest for this detector.

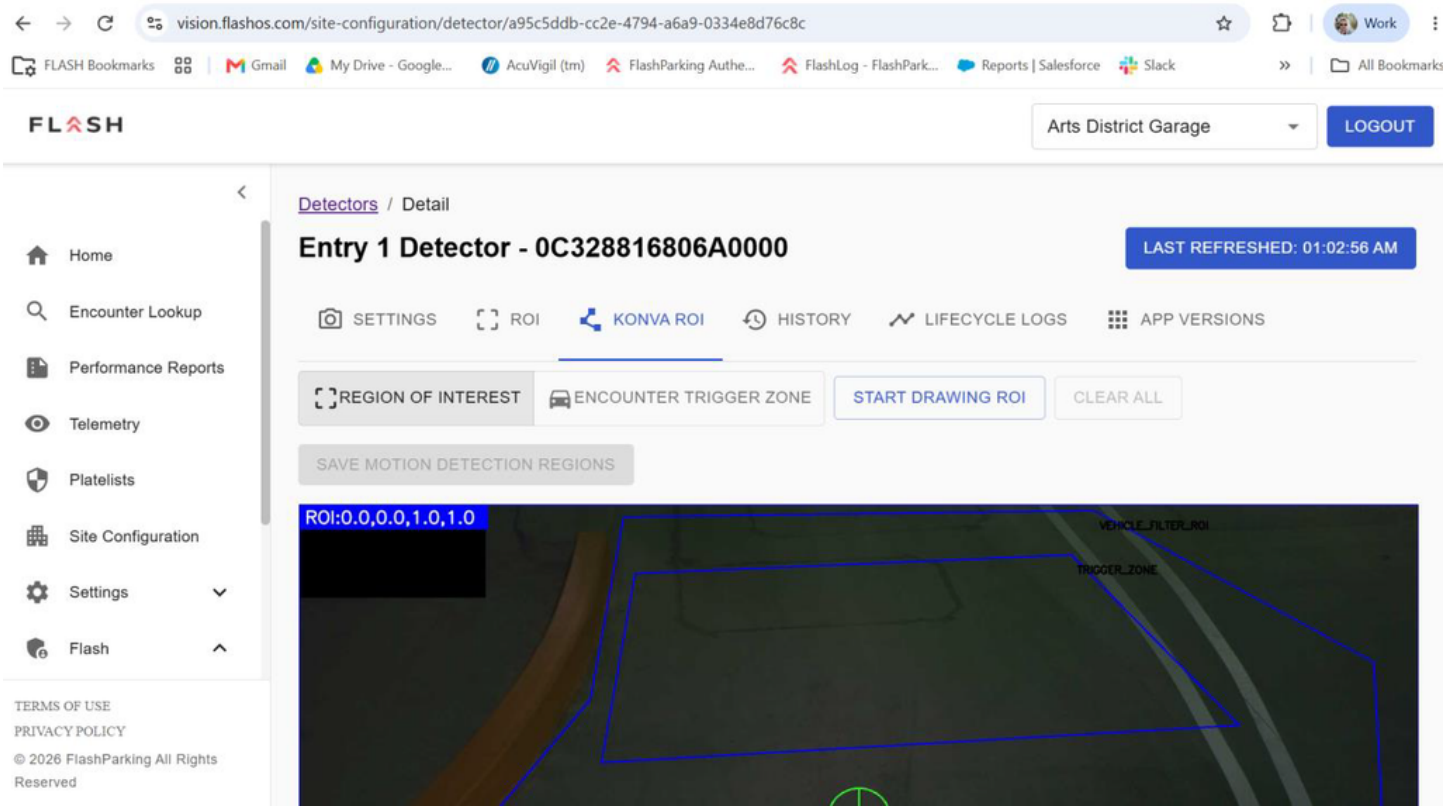

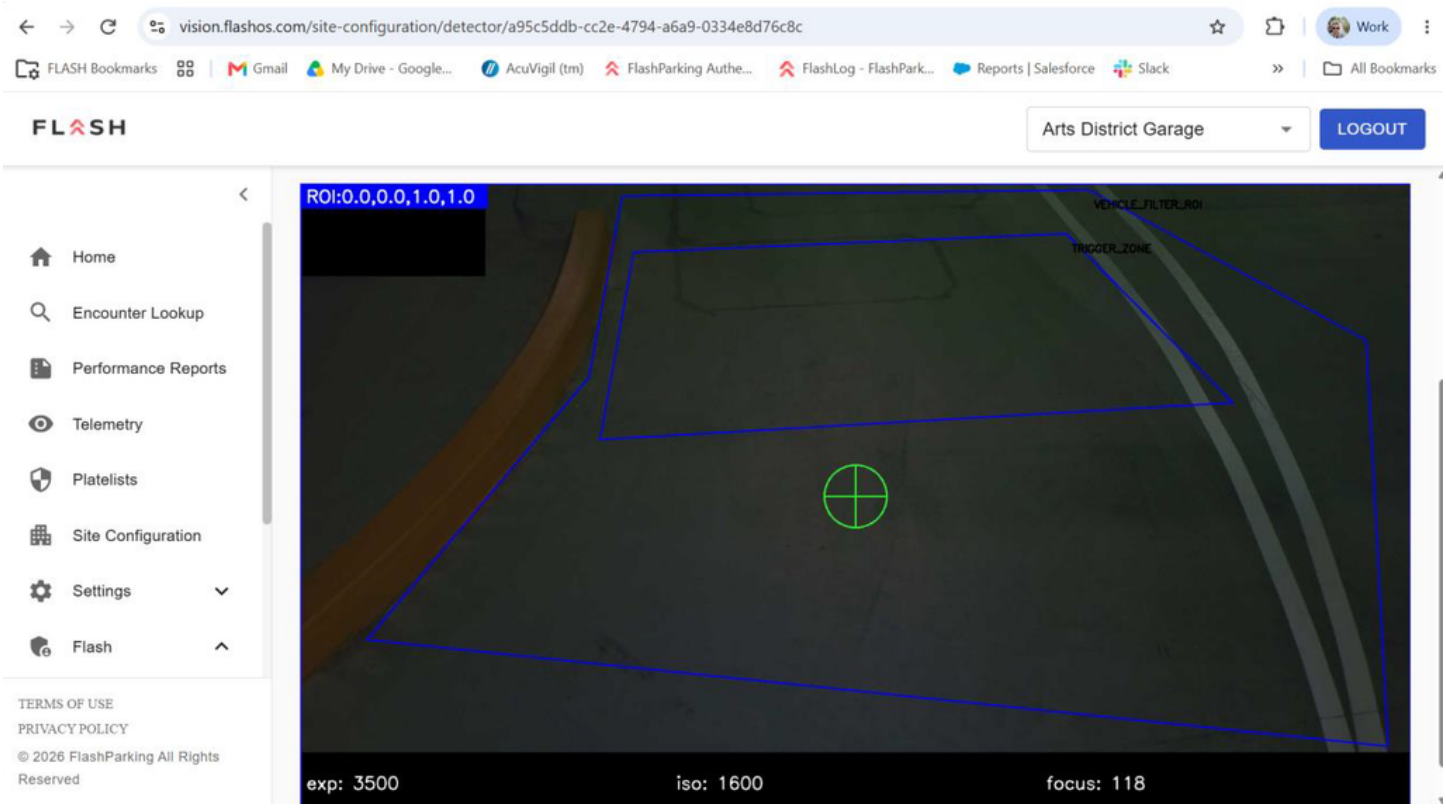
vision.flashos.com/site-configuration/detector/a95c5ddb-cc2e-4794-a6a9-0334e8d76c8c
Work
FLASH Bookmarks
Gmail
My Drive - Google...
AcuVigil (tm)
FlashParking Authe...
FlashLog - FlashPark...
Reports | Salesforce
Slack
All Bookmarks
FLASH
Arts District Garage
LOGOUT
Home
Encounter Lookup
Performance Reports
Telemetry
Platelists
Site Configuration
Settings
Flash
TERMS OF USE
PRIVACY POLICY
© 2026 FlashParking All Rights Reserved
ROI:0.0,0.0,1.0,1.0
VEHICLE_FILTER_ROI
TRIGGER_ZONE
exp: 3500
iso: 1600
focus: 118