


Gen2 Update Guide




Intro

This guide provides instruction on the correct procedure for updating a Gen2 terminal. This will require a Parkonect firmware USB drive.

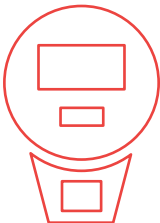


Est. Time Required

10 min

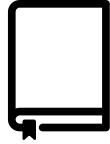

Knowledge Level

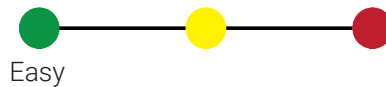

Easy




Parts/Tools Needed

- USB drive with firmware


1

Turn off terminal

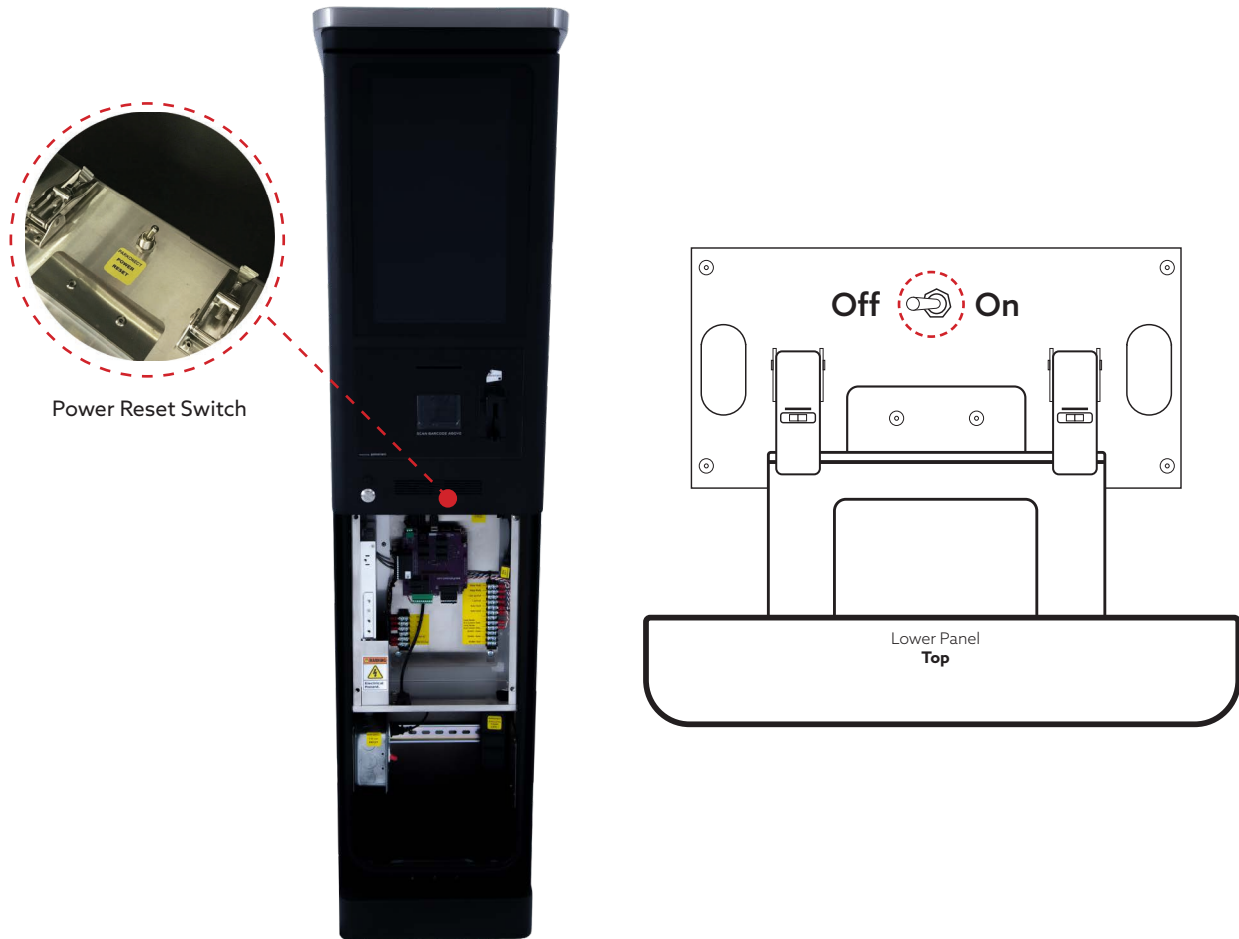

2

Insert USB drive into port on main control board



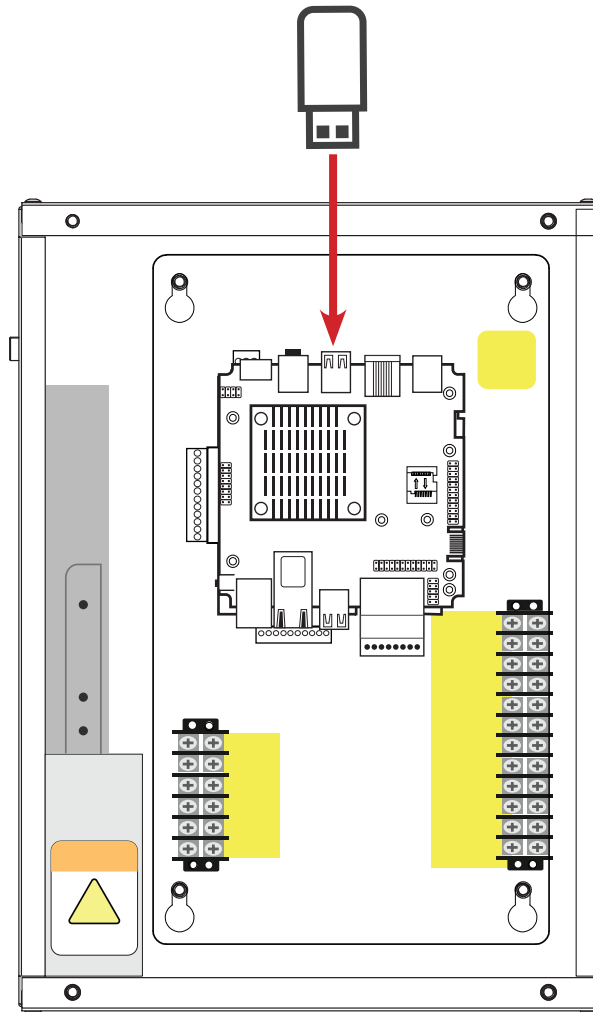


3

Press and hold update button located on the bottom left corner of the main control board.

Turn on terminal while continuing to hold button.

Release button when Parkonect logo appears on the screen

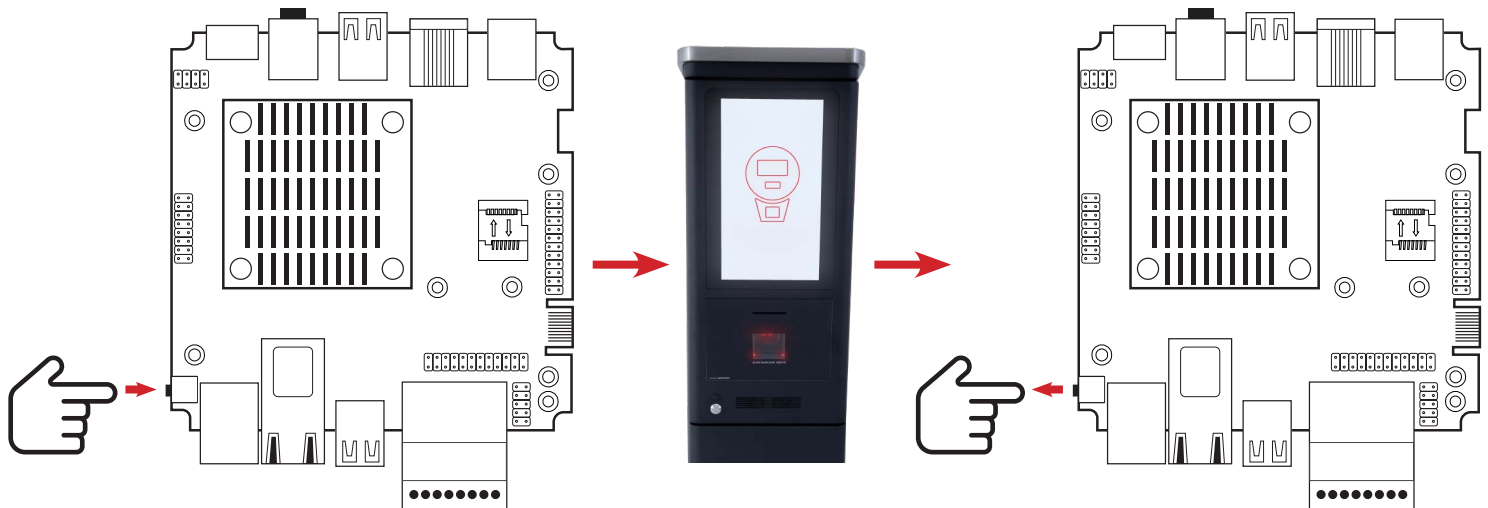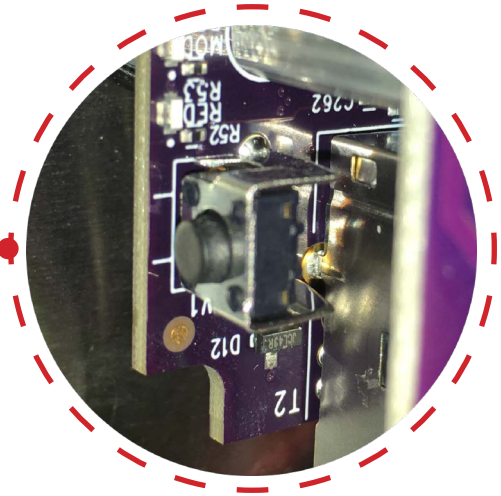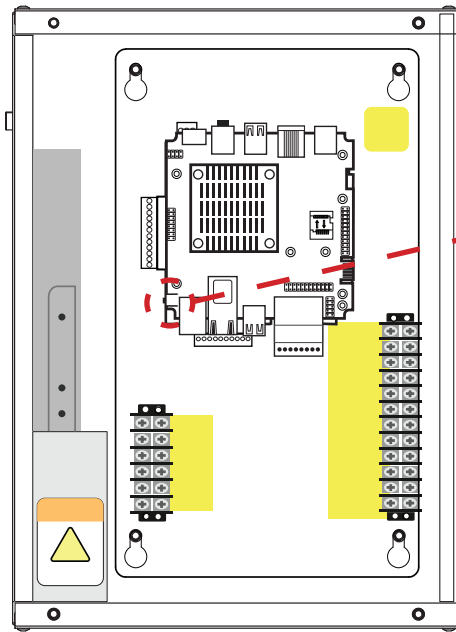


Press and hold

Release when logo appears


4

“Updating System, Do not power off” will appear in the top right corner of screen when update is in progress.

When complete, a third message will appear stating, ***“Remove power and recovery USB”***

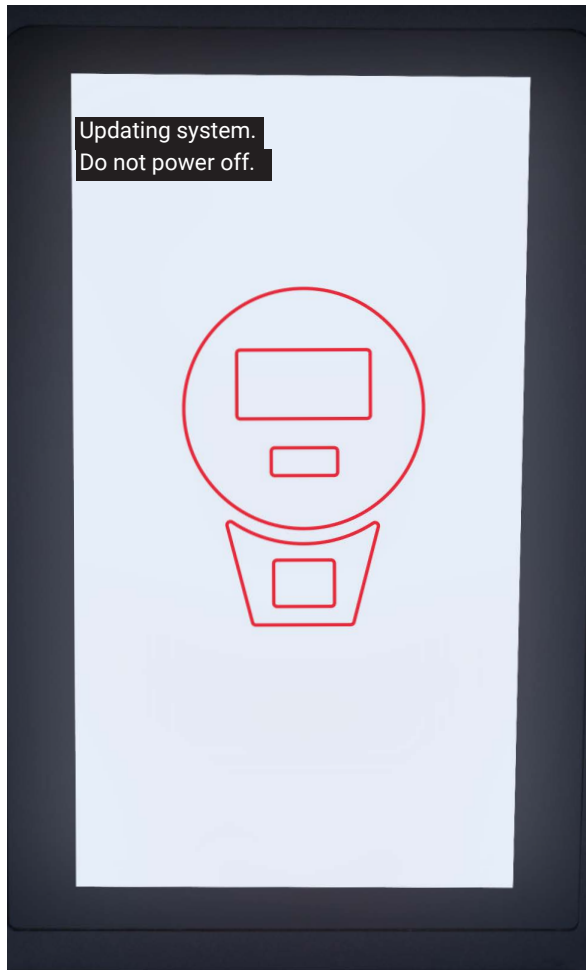

Update in progress

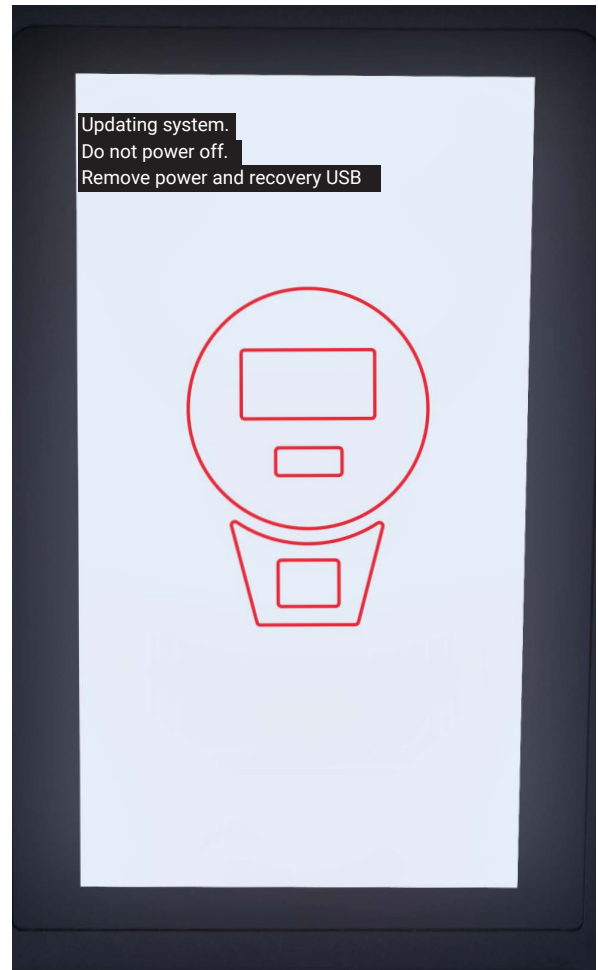

Update complete

5

Turn off unit.
Remove USB drive.
Turn unit back on.

Confirm unit's functionality with Parkonect support.

Questions?

Contact our support team!



312-878-1220



Support@parkonect.